

oursson®




bon appétit

User manual

*Induction
turbo cook*



Induction plate IP1215R

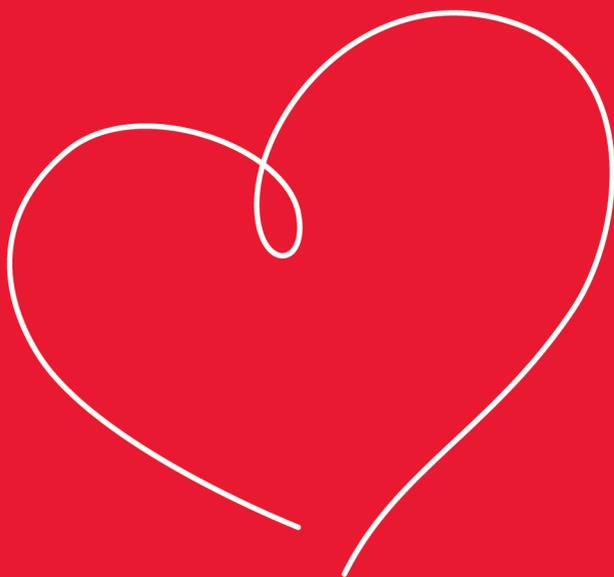

Congratulations on your purchase induction plate OURSSON!

The induction cooker works on the basis of an electromagnet that creates a powerful, high-frequency electromagnetic field. When cookware consisting of magnetic material (e.g. iron) is placed on the induction cooker, the electromagnetic field transfers energy to the bottom of the cookware, which causes the cookware and the food inside it to become hot. The amount of heat generated in the cookware is controlled by varying the strength of the electromagnetic field. When the strength of the electromagnetic field is changed, the temperature of the cookware changes instantly.

ADVANTAGES OF THE INDUCTION COOKER


- **Safe:** the induction cooker does not make use of an open flame or fire. It also has a number of safety features, which allow you to enjoy cooking with your family whenever you want.
- **Fast:** in induction cooker, the cookware serves as the heat source. This results in much faster and more even heat transfer, shortening the cooking time by more than 1/3 compared to conventional cooking.
- **Versatile:** the induction cooker has 2 preset cooking modes, each with its own optimal heating pattern. These modes allow you to prepare a great variety of nutritious meals.
- **Very user friendly:** the simple and interactive control panel and display allow you to easily adjust the settings at the touch of a button.
- **Comfortable:** the induction cooking process is smoke-free and produces less grease. Moreover, the cooker and the surrounding area stay cool. This allows you to cook in a cool and comfortable environment.
- **Portable:** the induction cooker has a compact design and the cooking plate stays cool. This means the appliance is always safe to use and allows you to cook anywhere in your home.

IMPORTANT

Read this user manual carefully before you use the appliance and save it for future reference.

DANGER





- Never immerse the appliance in water or rinse it under the tap.
- Do not cover any part of the cooking plate with aluminium foil to prevent the risk of electric shock, short circuiting or fire.

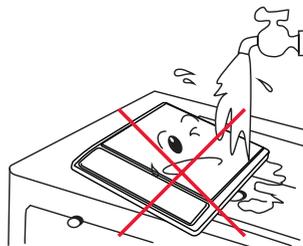

INTRODUCTION



WARNING

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- The temperature of accessible surfaces may be high when the appliance operates.
- Only connect the appliance to an earthed wall socket. Always make sure the plug is inserted firmly into the socket.
- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Oursson, a service centre authorised by Oursson or similarly qualified persons in order to avoid a hazard.
- If the surface of the cooking plate is cracked, switch off the appliance and do not use it anymore to prevent the risk of electric shock.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the mains cord out of the reach of children. Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands.
- Make sure the cooking plate is clean and dry before you switch on the appliance.
- Do not cover the air outlet while the induction cooker is operating.
- Do not plug in the appliance or operate the control panel with wet hands.
- Do not touch the cooking plate after cooking, as it retains heat from the cookware.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the cooking plate since they can get hot.

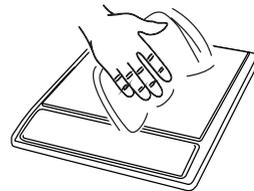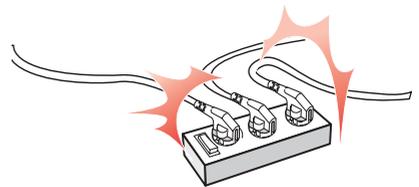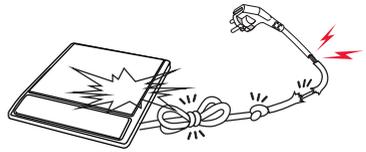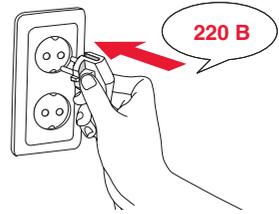

CAUTION

- Never use any accessories or parts from other manufacturers or that Oursson does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not expose the induction cooker to high temperatures, hot gas, steam or damp heat. Do not place the induction cooker on or near an operating or still hot stove or cooker.
- Always switch off the appliance before you unplug it.
- Always unplug the appliance and let it cool down before you clean it.
- This appliance is intended for indoor household use only. If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to the instructions in the user manual, the guarantee becomes invalid and Oursson will not accept liability for any damage caused.
- Place the induction cooker on a stable, horizontal and level surface and make sure there is at least 10cm free space around it to prevent overheating.
- Do not operate the appliance on a plastic tablecloth.
- Do not place anything between the cookware and the cooking plate.
- The maximum weight that can be put on the induction cooker is 7kg.
- Beware of hot steam that comes out of the cookware during cooking or when you remove the lid.
- Do not lift and move the induction cooker while it is operating.
- Never put empty cookware on the switched-on induction cooker, as this could cause the cookware to become distorted or the heating coil to become damaged.
- Do not store flammable materials and liquids near or on the induction cooker.
- Avoid hard contact between the cookware or other objects and the cooktop.
- Always place the cookware on the cooking zone

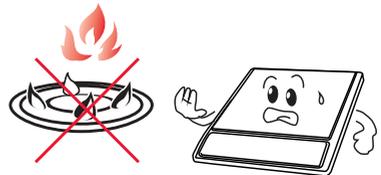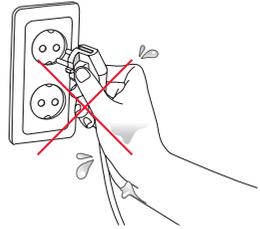

INTRODUCTION

during cooking.

- Never connect this appliance to an external timer switch or remote control system in order to avoid a hazardous situation.
- Do not use cookware with a bottom diameter of more than 16cm to deep-fry food, as this causes the appliance to malfunction.

AUTOMATIC SHUT-OFF

The appliance is equipped with automatic shut-off. It switches off automatically:

If there is no cookware or unsuitable cookware on the cooking plate when you press the start button or if you remove cookware from the cooking plate during cooking, the cooker beeps continuously, the display shows '----'. The cooker automatically switches off after 1 minute unless you put the cookware back onto the cooking plate within this minute.

ELECTROMAGNETIC FIELDS (EMF)

This Oursson appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

BEFORE FIRST USE

Remove all packaging material from the induction cooker.

PREPARING FOR USE

1. Place the appliance on a dry, stable and flat surface.
2. Make sure there is at least 10cm free space around the appliance to prevent overheating.
3. Always place the cookware on the cooking zone during cooking.
4. Make sure you use cookware of the correct type and size (see the tables below).

RECOMMENDED TYPES AND SIZES OF COOKWARE

ATTENTION! Use only the cookware suitable for induction plates.



| Suitable cookware for the induction plates | Cookware NOT suitable for the induction cooker |
|---|--|
| Cookware with a bottom made of iron or magnetic stainless steel | Cookware with a bottom made of non-iron metal, glass, aluminium and copper |
| Cookware with a flat bottom  | Cookware with a concave or convex bottom  |
| Cookware with a bottom diameter of 12-20cm, depending on the cooking mode(see tips below)  | Cookware with a bottom diameter of less than 12cm  |
| Cookware with a weight of up to 7kg (including contents) | Cookware with a weight over 7kg (including contents) |

Tip: When you cook in the manual mode, you can use cookware with a bottom diameter of 12-20cm.

Tip: To deep-fry food, we advise you to use cookware with a bottom diameter of 12-16cm.


INTRODUCTION

GENERAL DESCRIPTION



- 1 Cooking zone
- 2 Cooktop
- 3 Air outlet
- 4 Main cord
- 5 Control panel
- 6 Rotate button
- 7 Air inlet

CONTROL PANEL

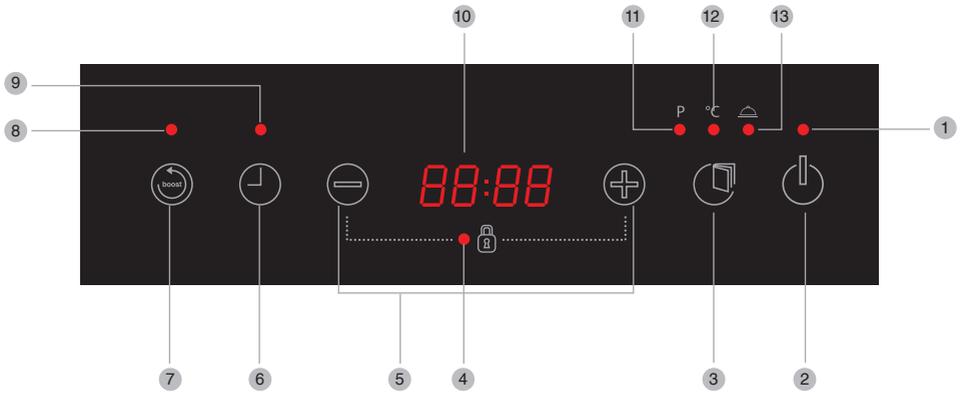

- ① Power **ON** light
- ② Mains switch **ON/OFF** 
- ③ **MODE** button 
- ④ **CHILD LOCK** light
- ⑤ **+** and **-** buttons
- ⑥ **COOKING TIMER** mode button 
- ⑦ **BOOST** mode button 
- ⑧ **BOOST** mode light
- ⑨ Timer mode light
- ⑩ Display
- ⑪ Power mode light
- ⑫ Temperature mode light
- ⑬ Preheating mode light

GENERAL DESCRIPTION

USING THE APPLIANCE

Use this  button to switch **ON/OFF** the main power of the induction plate.

Use this  and  buttons to adjust the heating power level or temperature, or to set the cooking time.

Use this rotation button  to adjust the heating power level or temperature, or to set the cooking time.

Use the power adjustment to set the heating power level or temperature.

Use **BOOST** button to cook with maximum heating power in any time.

Use this button  to use **COOKING TIMER** mode.

Use this button  to switch the induction plate between three modes:

- Power mode
- Temperature mode
- Preheating .

Only use cookware that is suitable for induction cooker (see chapter 'Preparing for use').

Note: Always place and use the appliance on a dry, stable and level surface.

Compliance with the values of the levels of heating power and temperature

| Temperature | Heating power level |
|-------------|---------------------|
| 60°C | 100 Watt |
| 80°C | 200 Watt |
| 100°C | 300 Watt |
| 120°C | 400 Watt |
| 140°C | 500 Watt |
| 160°C | 600 Watt |
| 170°C | 700 Watt |
| 180°C | 800 Watt |
| 190°C | 1000 Watt |
| 200°C | 1300 Watt |
| 220°C | 1600 Watt |
| 240°C | 2000 Watt |

USING THE DIFFERENT MODES

You can simply operate the appliance manually

- Put the mains plug in the wall socket, the unit beeps during 2 second. «L» shows and blink on the display. The induction plate goes to the stand-by mode.
- Touch the  button to switch **ON** the induction plate, display shows «---».

Tip: The induction plate automatically switch to the stand-by mode if you don't press any buttons during 1 minute. The unit will beep during 2-second.

- Place the cookware on the cooking zone
- Press the  and  buttons to set the heating power level.
- After setting heating power level the induction plate start to heat automatically.
- Touch the  button to switch **OFF** the induction plate after you finish cooking. The induction plate switch to the stand-by mode, display shows «L». After 1 minute the cooling fan will switch off.

Tip: If no any cookware on the induction plate in a cooking mode, the induction plate don't heating and beep during 1 second. After 1 minute the induction plate automatically switch in to stand-by mode.

Any time you touch the buttons the induction plate beeps 1 second.

THE HEATING POWER LEVEL ADJUSTMENT

You can simply operate the appliance manually

- Touch the  and  buttons to set the power level. During you touch buttons, the heating power light goes on and the power level shows on display.
- Push on the rotation button. Rotate this button to left or to right to adjust the heating power level. The heating power level shows on display. Push on the rotation button again to set the heating power level.

THE TEMPERATURE ADJUSTMENT

You may use two ways to set and adjust the heating temperature:

- After switch **ON** the induction plate and setting the heating power level, touch the  button two times, to choose temperature mode. The induction plate beep 1 second and the display shows the temperature and the temperature mode light goes on.
- Touch the  and  buttons to set the temperature. During you touch buttons, the display shows temperature from 60°C to 240°C. Choose the temperature and the induction plate automatically starts heating
- Use the rotate button by rotation to left or to right to set and adjust temperature heating. The display shows temperature from 60°C to 240°C. Choose the temperature and the induction plate automatically starts heating

GENERAL DESCRIPTION

THE SETTING AND USING PREHEAT MODE

- **Preheat mode.** After switch on the induction plate you should touch  button 3 times to choose the preheat mode. The preheat mode light goes on. The display shows temperature 60°C, heating power level 100 Watt. These are default settings. Your induction plate is in preheat mode. You may stop **PREHEAT** mode also by touch  button.

BOOST MODE

- If you need the maximum level in any time during cooking, please touch the **BOOST** button one time. The induction plate automatically switch to the maximum heating power level 2100 Watt, the boost mode light goes on.
- To stop the **BOOST** mode, touch the **BOOST** button again one time, the boost mode light goes OFF and the induction plate back to the preset heating power level.
- You may stop **BOOST** mode also by touch  button.

Note: You may use **BOOST** mode during cooking after setting the heating power level.

COOKING TIME SET MODE

- Touch the  button one time during the cooking mode, the cooking time light goes on. The induction plate is in stand-by mode to set the cooking time. Set the cooking time by using the  and  buttons or by using the rotation button. When you press the  and  buttons, the time increases or decreases by 1 minute. When you press the buttons longer, the time increases or decreases by 10 minutes. You may set the cooking time from 0 to 180 minutes. After you stop to set the cooking time, the display shows preset cooking time. The countdown starts automatically.
- If you set preheat mode with cooking timer mode together, the display shows the settings of each modes by rotation.
- After the cooking time finish countdown the induction plate stops heating and switch on to stand-by mode.
- The default cooking time is 2 hours.

CHILD LOCK FUNCTION

- Use this function to lock the control panel operation. Press the  and  buttons together for 2-3 seconds. Child lock indicator goes on. You may operate only by  button, all other buttons are locked.
- To unlock the control panel press  and  buttons together for 2-3 seconds. Child lock indicator goes off.

Note: Unplug the appliance after use.

CLEANING AND MAINTENANCE

Cleaning

Never immerse the appliance in water nor rinse it under the tap.

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Do not put vinegar on the cooktop.

1. Unplug the appliance and let it cool down.
2. Clean the appliance with a damp cloth and if necessary, with some mild cleaning agent.

Maintenance

Improper use can lead to scratches on the cooking plate.

To avoid discolouring and scratches, use the appliance according to the instructions in this user manual and always clean the appliance and cookware properly after use.



STORAGE

Do not place heavy objects on the cooktop as it is breakable.

Do not store the appliance in a hot place, for example near a cooker.

If you are not going to use the appliance for a longer period of time, we advise you to store the appliance in a dry and safe place.

TROUBLESHOOTING

If your induction cooker does not function properly or if the cooking quality is insufficient, consult the table below. If you are unable to solve the problem, contact a Oursson service centre or the Customer Care Centre in your country.

| Problem/ Codes on the display | Message | Solution/What you should do |
|-------------------------------------|--|--|
| | The power-on light does not go on. | <p>There is a connection problem.</p> <ul style="list-style-type: none"> • Check if the induction cooker is connected to the mains and if the plug is inserted firmly into the wall socket. • Check if the power cord have no damaged. |
| | The power on lights on the panel goes on, but the induction plate don't heating. | <ul style="list-style-type: none"> • Check if the using cookware are suitable for induction plates. • Check if the bottom size no less then 12cm. • Take the appliance to your Oursson dealer or a service centre authorised by Oursson. |
| | The induction plate stops heating during cooking mode. | <ul style="list-style-type: none"> • Check if the air outlet do not cover while the induction cooker is operating. • Check if the cooking timer is finished countdown. • Automatic protection system of induction plate switch on. Disconnect the power cord from the wall socket. Wait a few minutes, connect the power cord into the wall socket, touch  button. • Take the appliance to your Oursson dealer or a service centre authorised by Oursson. |

| Problem/ Codes on the display | Message | Solution/What you should do |
|-------------------------------------|---|---|
| E3; E6 | The induction plate inside parts are over heated. | <ul style="list-style-type: none"> • Automatic protection system of induction plate switch on. Disconnect the power cord from the wall socket. Wait a few minutes, connect the power cord into the wall socket, touch button. • Check if the air outlet do not cover while the induction cooker is operating. • Take the appliance to your Oursson dealer or a service centre authorised by Oursson. |
| E7; E8 | Unstable voltage in power supply network | <ul style="list-style-type: none"> • Check if the voltage in your home is suitable for the induction cooker |
| E1; E2; E4; E5; Eb; EC | | <ul style="list-style-type: none"> • Take the appliance to your Oursson dealer or a service centre authorised by Oursson. |

OTHER

| Technical specification | |
|--|-----------------------|
| Model name | IP1215R |
| Power consumption, Watt | 2000 |
| Voltage | ~ 220 V; 50 Hz |
| Protection class | I |
| The storage and delivering temperature | from -25°C till +35°C |
| Operation temperature | from +5°C till +35°C |
| Air humidity | 15-75% |
| Net weight | 2,8 kg |
| Dimensions, mm | 370x300x62 |

www.oursson.com

